




Mastercool[®] Inc.
"World Class Quality"

**ELECTRONIC LEAK DETECTOR
WITH HEATER SENSOR**

**TROUBLESHOOTING
(55500)**

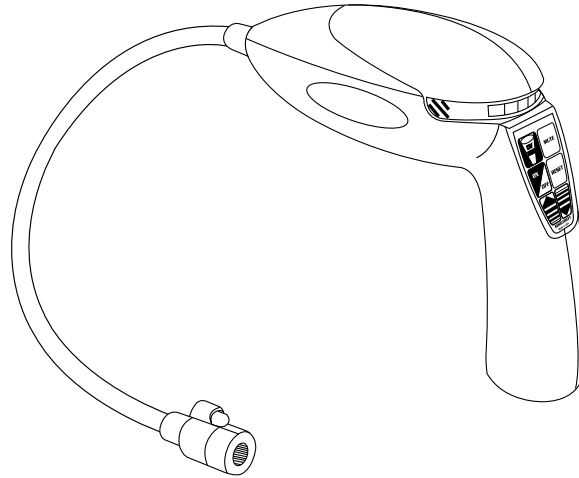

Battery Check: Always check the batteries before any kind of repair. Weak batteries can create false readings.

	ISSUE	SOLUTION
1.	No keypad reaction	Replace the keypad (55200-KEY)
2.	No leak readings	<ul style="list-style-type: none">• The sensor may need to be replaced (55500-SEN) (Sensors usually last around 20 hours)• The probe may need to be replaced (55500-PR)
3.	When the unit is not responding to any function	<ul style="list-style-type: none">• Look for loose or broken wires on the PC board• May need to change the PC board (55500-PC)
4.	LED lights do not show any readings	Replace the LED light (55100-LED)
5.	Broken wire on PC board connecting to battery	Change the battery wire (55500-WIRE)

REPLACEMENT PARTS

DESCRIPTION	PART #
SENSOR	55500-SEN
PROBE	55500-PR
PC BOARD	55500-PC
KEY PAD	55200-KEY
LED LIGHT	55100-LED
BATTERY WIRE	55500-WIRE