



Mastercool[®]
"World Class Quality"
Inc.

HYDRA-KRIMP

**SELF REPAIRING FOR HYDRA-KRIMP ASSEMBLY
(71500)**

Please reference 71500-PARTS

LEAKING ON TWO COMMON PLACES ON SECTION 'A'

1. Around shaft assembly under handle.
2. Around piston shaft under yoke.

FOR REPLACING HAND SHAFT ASSEMBLY UNDER HANDLE

1. Remove snap-ring on the pin No. 37A.
2. Remove the handle No. 56.
3. Unscrew nut No. 35.
4. Remove the complete shaft.
5. Replace it with the new shaft assembly.

FOR REPLACING THE DOUBLE LAYER O-RING AROUND THE PISTON SHAFT UNDER YOKE

1. Remove screw No. 20.
2. Unscrew piston cap No. 15.
3. Remove piston cap, piston shaft, piston spring, No : 15, 16, 17.
4. Replace double layer o-ring No. 18.