

VACUUM SENSOR FIELD CALIBRATION PROCEDURE

1. Turn unit ON with ATM sensor plugged in.
2. Hold down UNIT key until CAL is displayed.
3. Within 3 seconds, press ENTER key.....AU CAL will show on the display.
4. Press ENTER key.....ENDCAL will show on the display.
5. Power unit OFF.....calibration is completed.