


## "RAPTOR" REFRIGERANT LEAK DETECTOR

## TROUBLESHOOTING (56100)

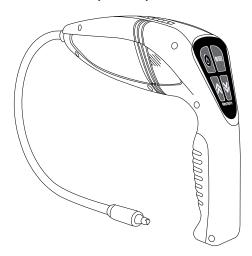

Battery Check: Always check the batteries before any kind of repair. Weak batteries can create false readings.

	ISSUE	SOLUTION
1.	No keypad reaction	Replace the keypad (56100-KEY)
2.	No leak readings	<ul> <li>The sensor may need to be replaced (55100-SEN)         (Sensors usually last around 20 hours)</li> <li>The probe may need to be replaced (55100-PR)</li> </ul>
3.	When the unit is not responding to any function	<ul> <li>Look for loose or broken wires on the PC board</li> <li>May need to change the PC board (55100-PC)</li> </ul>
4.	LED lights do not show any readings	Replace the LED light (55100-LED)

REPLACEMENT PARTS	
DESCRIPTION	PART #
SENSOR	55100-SEN
PROBE	55100-PR
PC BOARD	55100-PC
KEY PAD	56100-KEY
LED LIGHT	55100-LED