


TROUBLESHOOTING (56200)

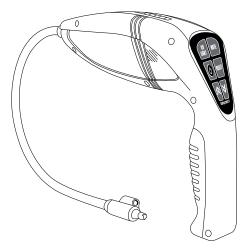

Battery Check: Always check the batteries before any kind of repair. Weak batteries can create false readings.

	ISSUE	SOLUTION
1.	No keypad reaction	Replace the keypad (56200-KEY)
2.	No leak readings	 The sensor may need to be replaced (55100-SEN) (Sensors usually last around 20 hours) The probe may need to be replaced (55200-PR)
3.	When the unit is not responding to any function	 Look for loose or broken wires on the PC board May need to change the PC board (55200-PC)
4.	LED lights do not show any readings	Replace the LED light (55100-LED)

EPLACEMENT PARTS	
DESCRIPTION	PART #
SENSOR	55100-SEN
PROBE	55200-PR
PC BOARD	55200-PC
KEY PAD	56200-KEY
LED LIGHT	55100-LED