


ELECTRONIC CHARGING SCALE

TROUBLESHOOTING (98210-B1-SCALE)

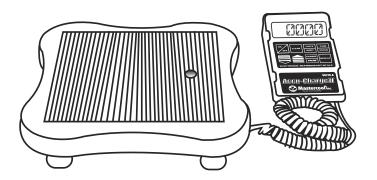

	ISSUE	SOLUTION
1.	When the scale locks up and will only display one weight	Change the chip (part # 98210-chip)
2.	When the scale displays everything but a zero value	Follow the recalibration procedure
3.	Cannot recalibrate	Replace the PC board (part # 98210-PC)
4.	No weight readings display when weight is on the scale	Replace the load cell (part # 98210-L-Cell)
5.	Losing calibration	The battery is low, may need replacing
6.	Blank screen could mean a loose wire	Check the PC board and behind the LCD screen

Note: After changing the PC board, load cell or chip, always recalibrate.

REPLACEMENT PARTS		
DESCRIPTION	PART #	
PC BOARD	98210-PC	
LOAD CELL	98210-L-CELL	
CHIP	98210-CHIP	