

ELECTRONIC CHARGING SCALE

TROUBLESHOOTING (98210-B1-SCALE)



| | ISSUE | SOLUTION |
|----|--|--|
| 1. | When the scale locks up and will only display one weight | Change the chip (part # 98210-chip) |
| 2. | When the scale displays everything but a zero value | Follow the recalibration procedure |
| 3. | Cannot recalibrate | Replace the PC board (part # 98210-PC) |
| 4. | No weight readings display when weight is on the scale | Replace the load cell (part # 98210-L-Cell) |
| 5. | Losing calibration | The battery is low, may need replacing |
| 6. | Blank screen could mean a loose wire | Check the PC board and behind the LCD screen |

Note: After changing the PC board, load cell or chip, always recalibrate.

| REPLACEMENT PARTS | | |
|-------------------|--------------|--|
| DESCRIPTION | PART # | |
| PC BOARD | 98210-PC | |
| LOAD CELL | 98210-L-CELL | |
| CHIP | 98210-CHIP | |