

 
53123 DYE/OIL INJECTOR

WARNING



- When injecting dye into a pressurized system, ALWAYS wear safety glasses and gloves!
- Never breathe refrigerant vapor!
- Never use the UV light without wearing the UV glasses!
- Lamp surfaces will get hot very quickly. DO NOT TOUCH THE LENS!

DYE INJECTION INSTRUCTIONS:



A. PURGING AIR FROM THE HOSE ASSEMBLY

It is important to eliminate any air in the hose before injecting dye into the A/C system. (This process is necessary only once for the setup).

- Hold the dye injector (1) upward while unscrewing the cap/hose assembly (2). Turn the handle of dye injector (1)
 counter clockwise all the way before filling. Fill the injector with dye. Replace cap/hose assembly, tightening
 securely.
- 2. While holding the assembly upward, start turning the handle (1) clockwise. Continue turning as dye enters the hose and pushes the air up. Use a pen to press the depressor of the coupler (3) to release the air. Repeat this process as needed until dye appears at the coupler's end.

B. INJECTION

1. Turn the A/C system and engine off!!

Connect injector to the low side service port of A/C system. Hold body of injector. Use (1) starting line on handle end as a guide. Turn handle clockwise to inject 1 application of dye.

(Approximately 1 to 1 1/4 turn(s) for Concentrated Dye). (Approximately 3 1/2 turns(s) for Standard Dye).

3. Disconnect injector from the system and clean any excess dye left around the service port

Dye Application Chart		
Automotive	1 Application per system (for a system using up to 10 oz. [300 ml] of lubricant)	
HVAC	1 Application per system (for a system using up to 7 lbs. [3.2 kg] of refrigerant)	

 
OIL INJECTION INSTRUCTIONS:

A. FOLLOW THE DYE INJECTION INSTRUCTIONS TO PURGE AND FILL THE CONTAINER.

B. INJECTION

1. Turn the A/C system and engine off!!

- Connect injector to the low side service port of A/C system. Hold body of injector. Use (1) starting line on handle end
 as a guide. Turn handle clockwise to inject 1 application of oil.
 (Approximately 3 1/4 turn(s) for 1/4 oz oil).
- 3. Disconnect injector from the system and clean any excess oil left around the service port



(Fig.)	Part #	Description
(1)	53223-001A	Dye Injector Body
(2)	53223-001B	Cap (only)
(2A)	53223-001C	0-Ring
(2B)	53223-001D	Hose Assembly
(4)	90333-UV	R12 (1/4" FL) Shut-Off Valve
(5)	90336	O-Ring for 90333-UV

For parts or service contact the service department: 1-888-825-6989

[⚠] WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.