



98211-B CALIBRATION PROCEDURE

- 1. Remove sealing sticker and open case.
- 2. Change jumper position from NOR to CAL and close case.
- 3. Press ON to turn the scale on.
- 4. When the display reads version code, press and hold ENTER + CLEAR together to enter SET-1.
- 5. Under SET-1, press ENTER to enter SET-11, press ENTER, display shows a count value.
- 6. With the platform empty, press \mathbb{W} to memorize the zero position.
- 7. Put a calibration weight on (EX: 90 kg) the scale, after the display stabilizes, press TARE to memorize the count value, display shows 90.000 and flashes.
- 8. Input calibration weight 90.000 by pressing SHIFT to shift position, press fig. or to change number, press ENTER to confirm, re-start the scale.
- Remember to return jumper position to NOR. Calibration from external (ex: keyboard) is not allowed according to regulation, this function has been blocked.

